Tailored Seam Finish

By: BurdaStyle

http://www.burdastyle.com/techniques/tailored-seam-finish

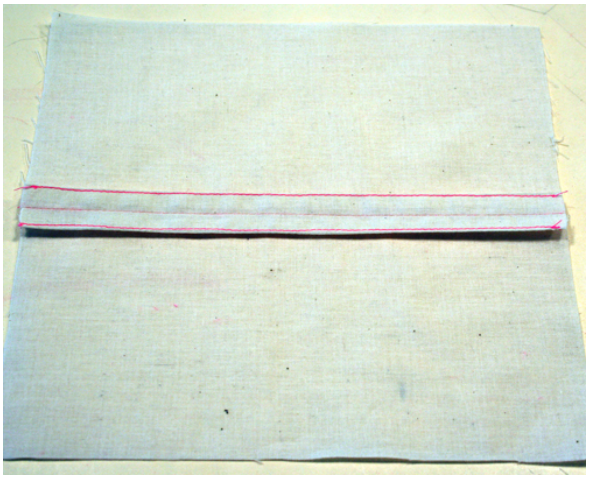

One of many options for finishing the raw edges of a seam.

Step 1

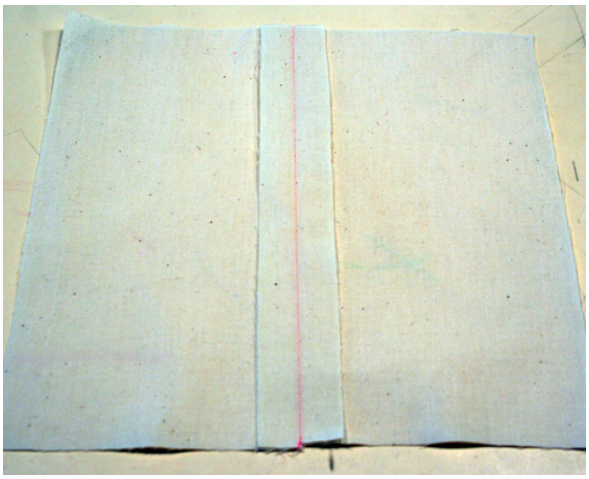

Press seam allowances apart.

Step 2

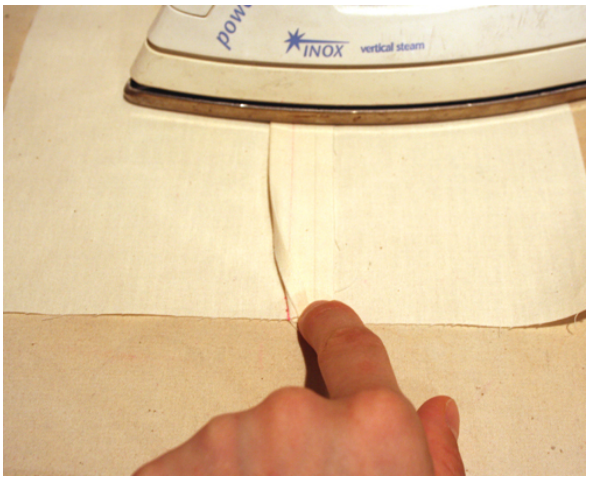

Turn under edge of seam allowance 1/8â; depending on the type of fabric, 1/4â may be easier.

Step 3

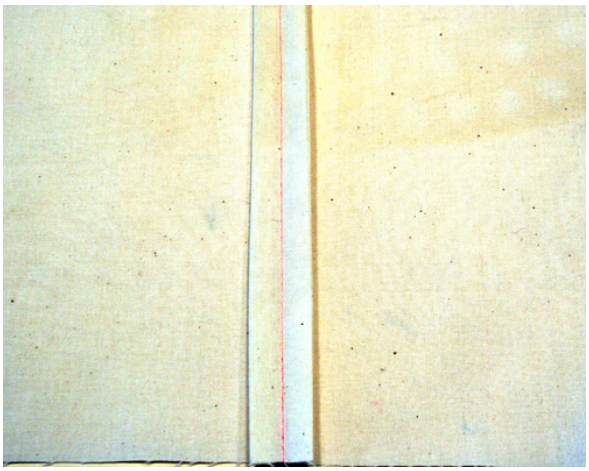

After pressing, it will look like this.

Step 4

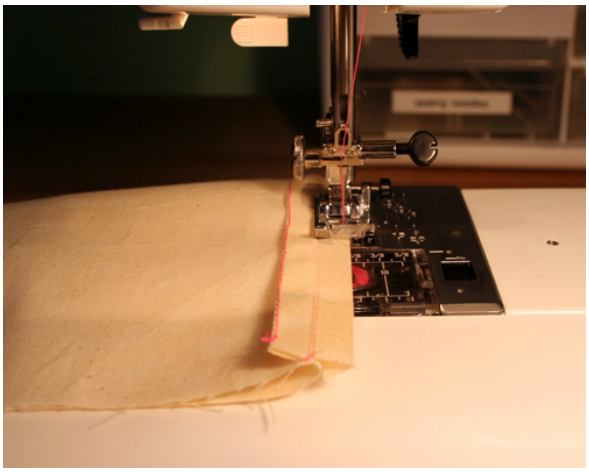

Stitch along the edge of the fold on both sides and press again.

Step 5

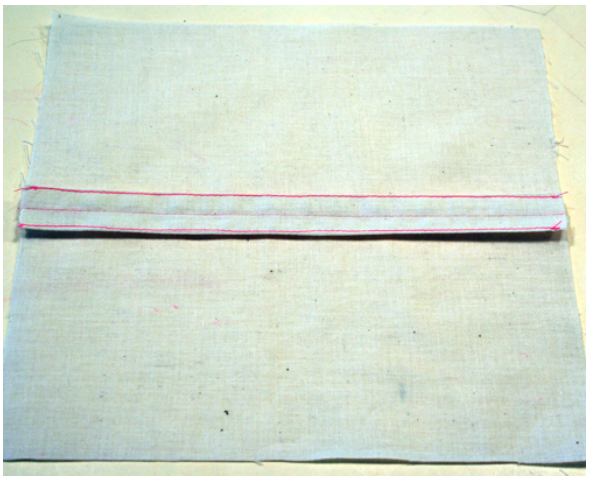

The finished tailored seam should look like this.